

Suction Regulators

BOEHRINGER

®

Caring for Patients' Lives Through Innovation, Quality and Service

Method for Diagnosing/Repairing the Intermittent Function on Boehringer Models: 3704, 3804, 3844, 7804, 3714, 3814


Boehringer Suction controls have been designed to require minimal maintenance throughout the lifetime of the units. However due to the nature of intermitting modules, fluid intrusion* can cause scenarios in which an intermitting module will cease to function. In the event that a Boehringer regulator fails to intermit, the following procedure may restore functionality. **Note: Please refer to the user manual for further instructions on trouble shooting and proper operation.**

EVALUATION

- Remove the dashpot cover



- Depress the dashpot. The dashpot should freely move back to its original position. In the event that the dashpot is seized or sluggish in movement, cleaning of the entire control valve assembly is required.

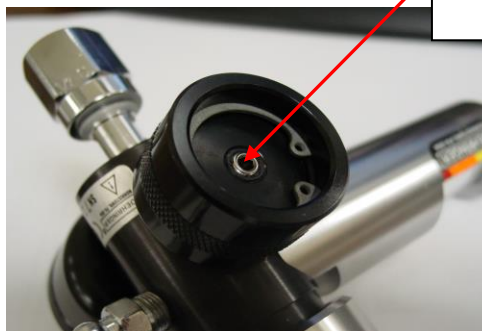

- If the dashpot moves freely then the intermitter should function, please refer to the user manual for further troubleshooting.

*Fluid intrusion is the leading cause of regulator malfunction. Always wear proper Personal Protective Equipment and follow your facility's protocol for handling contaminated instruments.

Boehringer Laboratories, Inc.

3700.053 Rev A

300 Thoms Drive, Phoenixville, PA 19460 • 800-642-4945 • 610-278-0900 • Fax: 610-278-0907 •
www.boehringerlabs.com



Caring for Patients' Lives Through Innovation, Quality and Service

DISASSEMBLY AND CLEANING

- Hold the selector knob and rotate the dashpot housing counter-clockwise.



- When the dashpot is completely unscrewed, slide the dashpot section out of the regulator body.
Note: In the event that the dashpot is seized, removing the parts may require appropriate force.

- Clean and lubricate the dashpot shaft as required.





Caring for Patients' Lives Through Innovation, Quality and Service

REASSEMBLY

- Insert the dashpot shaft into the control valve.
Note: Ensure that the detent and spring are properly inserted into the regulator body.
Ensure the words "INTERMIT" face towards the control knob.



- Hold the selector knob and rotate the dashpot clockwise until tight.



TEST

Ensure the Unit properly intermits when tested according to the procedure found in the Instructions for Use for the particular model. These instructions for use may be found on the Web at www.boehringerlabs.com or may be requested by contacting the factory at 1-800-642-4945.